


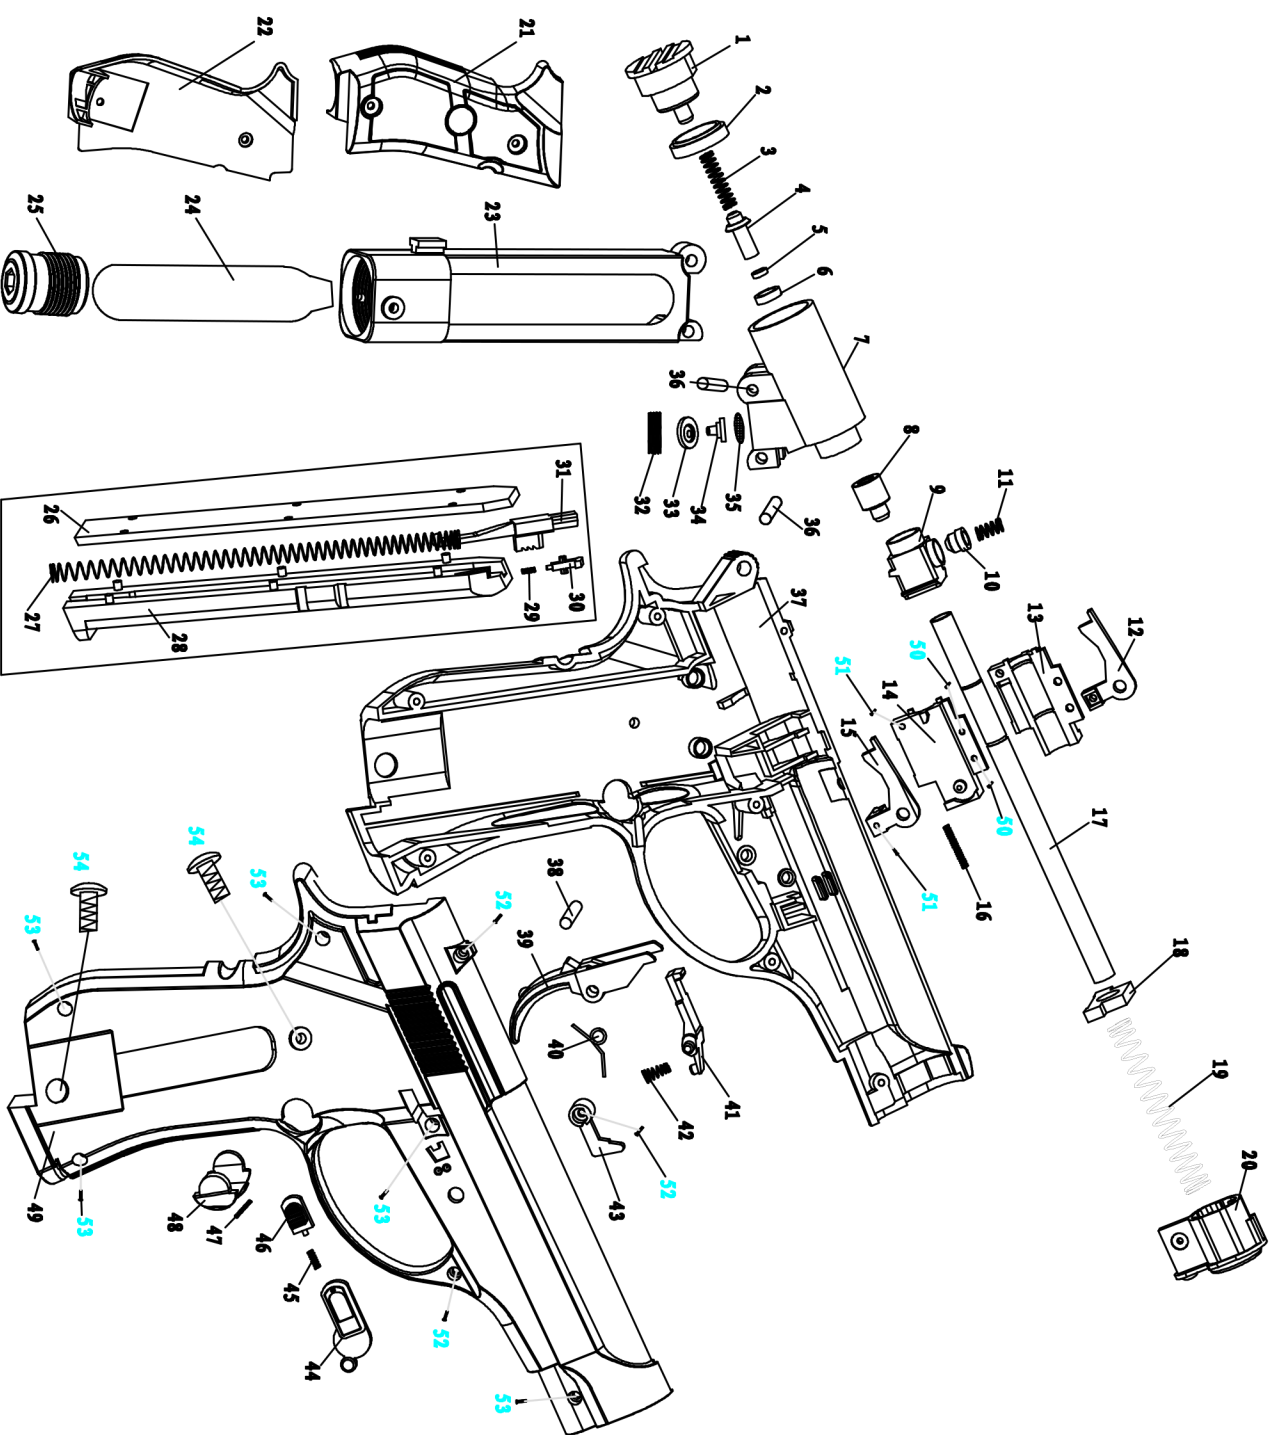

No.	Name	No.	Name
1	air container cover	28	magazine top plate
2	big sealing-ring	29	bullet loader spring
3	valve spring	30	lock
4	valve	31	pin
5	copper sheath	32	screw
6	small sealing-ring	33	ring
7	air container	34	pin
8	valve block	35	filter Ø6.0mm
9	bullet loader	36	shaft
10	copper rib	37	left case
11	copper rib spring	38	shaft Ø 3.0x200
12	trigger lock left plate	39	trigger
13	hammer left padlock	40	trigger spring
14	hammer right padlock	41	slide plate
15	trigger lock right plate	42	spring
16	trigger lock spring	43	rotate plate
17	rotation barrel spring (100+100)	44	safety button
18	main spring firing plate	45	safety spring
19	main spring	46	push button
20	TRP	47	spring
21	right grip	48	magazine lock
22	left grip	49	right case
23	gas bottle supporter	50	screw Ø 2x4 TB
24	gas bottle	51	screw Ø 2x TB + head Ø 2mm
25	screw	52	screw M2x6 TB
26	magazine bottom case	53	screw M2x8 TB
27	magazine main spring	54	screw M3x8 TB